

ADJUSTING A FAUCET COUNTERWEIGHT

If your faucet spray head is not retracting or staying in place, this issue can be fixed by adjusting the counterweight attached to your sink. **You do NOT need to dismantle the faucet either above the sink or under the sink.**

These common kitchen pull-out faucets have a weight in the middle of the spray hose (the hose you see when you pull the faucet out) this simple weight limits how far you can extend the spray hose and helps it retract back into the faucet spout. Your faucet may have a magnetic spray head feature, but this does not function to pull your spray head back into place, that is the work of the counterweight.



You need to look under your sink. Find the spray hose that is the one that you use when you pull out the faucet. On that hose should be a small weight (either white or black depending on the model). It is held to the hose with 2 screws. Use either a Phillips screwdriver or straight screwdriver will be the tool you need to adjust, move, or add a weight to the kitchen faucet hose.